

Vetus[®]

Bow thruster panel BPJSTH5

Installatie instructies


Installation instructions

Installationsvorschriften


Instructions d'installation

Instrucciones de instalación

Istruzioni per l'installazione

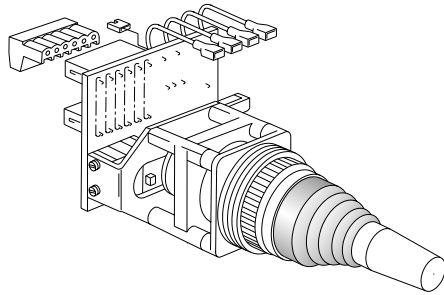

Aan-uit schakelaar
On-Off switch
Ein-/Ausshalter
Commutateur marche/arrêt
Interruptor encendido/apagado
Interruttore On/Off

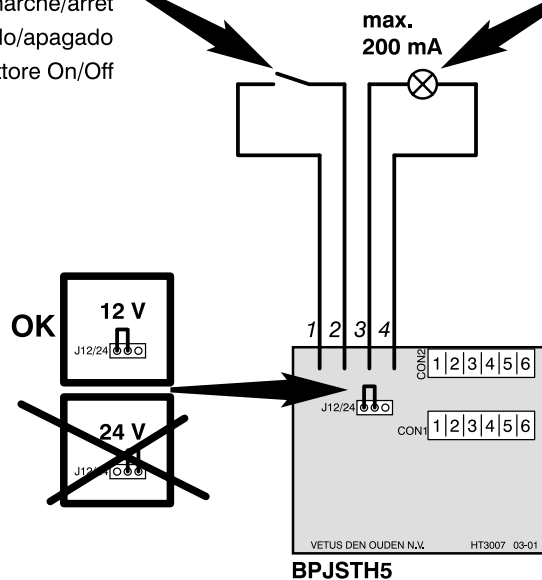

Bij 12 V boordspanning: 12 V lampje
Bij 24 V boordspanning: 24 V lampje

12 V ship's power supply: 12 V warning lamp
24 V ship's power supply: 24 V warning lamp

Bei 12 V Bordspannung: 12 V Warnlämpchen
Bei 24 V Bordspannung: 24 V Warnlämpchen

Tension de bord 12 V: voyant d'avertissement 12 V
Tension de bord 24 V: voyant d'avertissement 24 V

Tension de a bordo 12 V: lámpara de control 12 V
Tension de a bordo 24 V: lámpara de control 24 V

Tensione di bordo 12 V: Spia luminosa 12 V
Tensione di bordo 24 V: Spia luminosa 24 V

1, 2:	rood	3, 4:	wit
	red		white
	rot		weiss
	rouge		blanc
	rojo		blanco
	rosso		bianco

Vetus den Ouden n.v.

FOKKERSTRAAT 571 - 3125 BD SCHIEDAM - HOLLAND - TEL.: +31 10 4377700 - TELEX: 23470
TELEFAX: +31 10 4372673 - 4621286 - E-MAIL: sales@vetus.nl - INTERNET: <http://www.vetus.nl>

Printed in the Netherlands
12.0104 I.BPJSTH5 08-01