
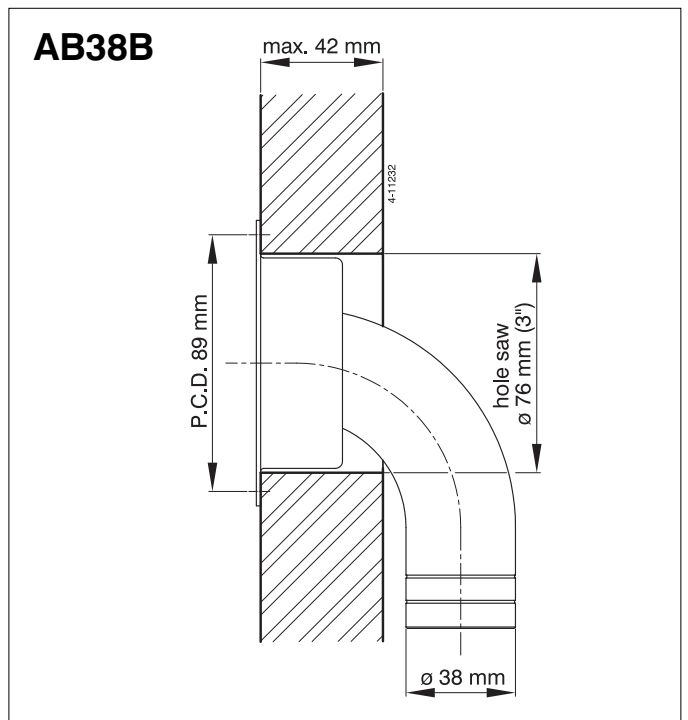
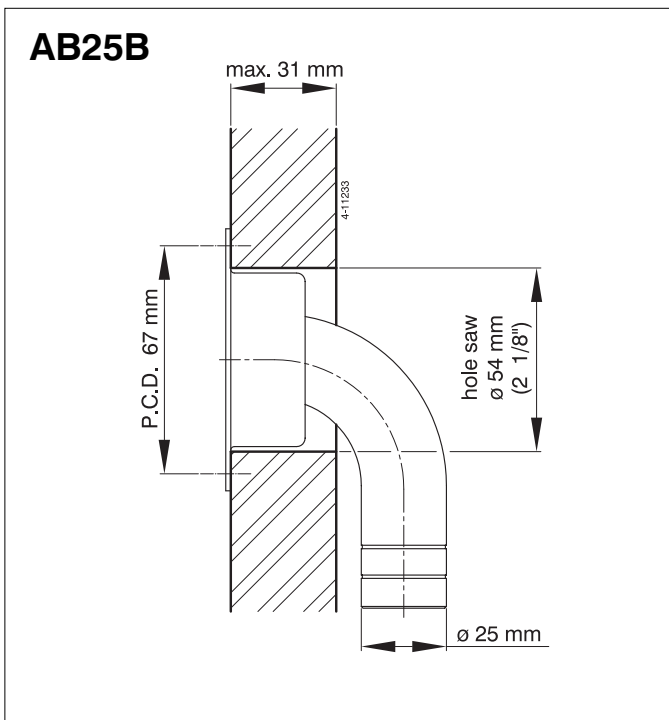
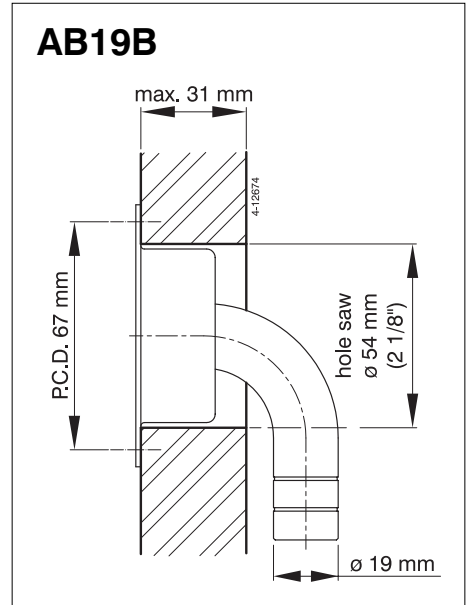
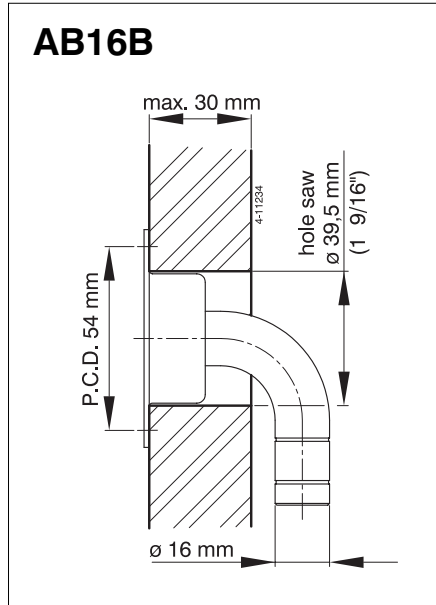


Roestvaststalen ontluchtingsnippels
Stainless steel breather nipples
Entlüftungsnippel aus nichtrostendem Stahl
Reniflards en acier inoxydable
Purgadores de acero inoxidable
Raccordi di sfiato in acciaio inossidabile

Installatieinstructies
Installation instructions
Einbauanleitung
Instructions d'installation
Instrucciones de instalación
Istruzioni per il montaggio

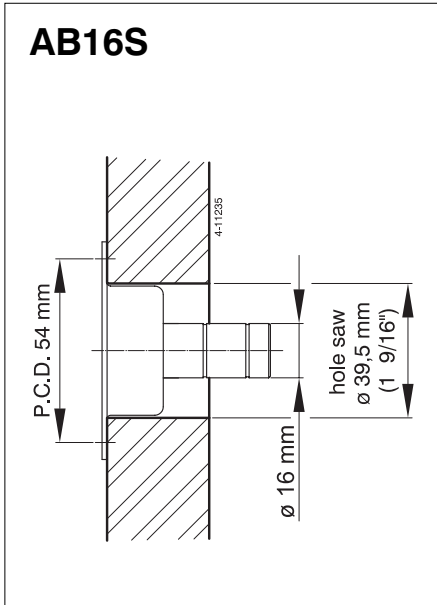

Onderhoud

Reinig de zeef minimaal éénmaal per jaar.

Maintenance

Clean the filter at least once annually.

Wartung

Das Sieb mindesten 1 Mal pro Jahr reinigen.

Entretien

Nettoyez le tamis au moins une fois par an.

Mantenimiento

Limpiar el colador al menos una vez al año.

Manutenzione

Pulire il setaccio almeno una volta all'anno.

Hoofdafmetingen


Principal dimensions

Hauptabmessungen

Dimensions principales

Dimensiones principales

Dimensioni principali

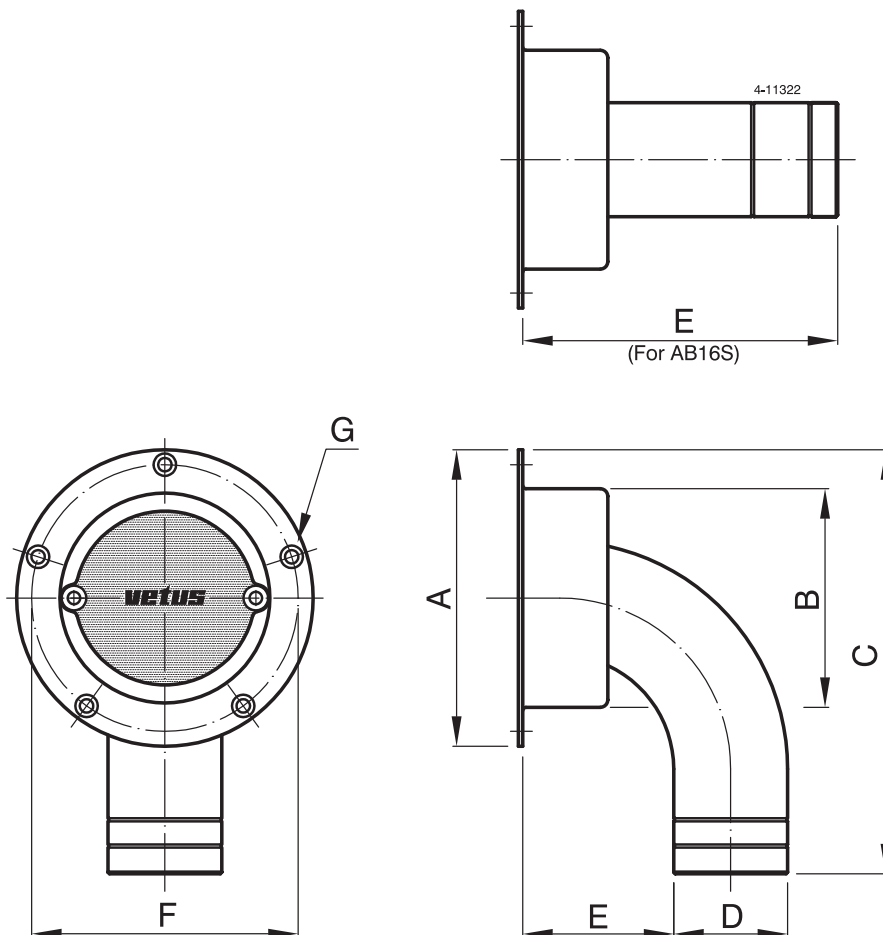

	A	B	C	D	E	F	G
AB16B	64	38	81	15,9	37	54	ø 4,5 x 3
AB16S	64	38	-	15,9	47	54	ø 4,5 x 3
AB19B	77	51	99	19	33,5	67	ø 4,5 x 4
AB25B	77	51	112	25,4	38	67	ø 4,5 x 4
AB38B	99	73	142	38,1	50	89	ø 4,5 x 5

vetus den ouden n.v.

FOKKERSTRAAT 571 - 3125 BD SCHIEDAM - HOLLAND - TEL.: +31 10 4377700 - TELEX: 23470
 TELEFAX: +31 10 4372673 - 4621286 - E-MAIL: sales@vetus.nl - INTERNET: http://www.vetus.com